

BCW1 WALL MOUNT AIR HANDLER CRITICAL PARTS LIST

DESCRIPTION	PART NUMBER	USED ON THESE MODELS
HOUSING-BLOWER (10X6) WITH WHEEL	R76701156	BCW1(ALL)
MOTOR-BLOWER 1/4 HP 208/240V 3SPD	R76700980	BCW11805NA4X, BCW124(05,07)NA4X
MOTOR-BLOWER 1/3 HP 208/240V 3SPD	R76700981	BCW130(05,07)NA4X
MOTOR-BLOWER 1/2HP 230V X13	R76701083	BCW1E36(07,10)NA4X
RELAY HEAT 4 PRONG 24VAC 50/60 HZ	R76701259	BCW1(ALL)
PAN-DRAIN 66925300	R76701179	BCW1(ALL)
COIL INDOOR EVAP 66793600	R76701071	BCW11805NA4X, BCW124(05,07)NA4X
COIL-INDOOR EVAP 66795600	R76701073	BCW130(05,07)NA4X
COIL-INDOOR EVAP 66800900	R76701076	BCW1E36(07,10)NA4X
TRANSFORMER (208/240 VOLT)	R76734700	BCW1(ALL)
BOARD CIRCUIT	R76700854	BCW1(ALL)
CAPACITOR 7/5 FMFD	R76734100	BCW1(ALL)
DISCONNECT SWITCH	R110000248	BCW1(ALL) ONLY SOLD IN PK OF 5
HEATER 5KW WITH PULL DISCONNECT	R76700871	BCW11805NA4X, BCW12405NA4X, BCW13005NA4W
HEATER 7.5KW WITH PULL DISCONNECT	R76700872	BCW12407NA4X, BCW13007NA4X, BCW1E3607NA4X
HEATER 10KW WITH PULL DISCONNECT	R76700873	BCW1E3610NA4X
LIMIT SWITCH	R110000245	BCW1(ALL)
VALVE TXV NON BLEED R410	R66396124	BCW1(ALL)