

## Remote Control Set-Up

Open the battery compartment cover and install 2 ea AAA (UM-4, R03) batteries. Replace the battery slide cover and check to make sure the remote LCD is functioning to indicate correct battery installation. You may now set your remote using one of the following methods.

### 1. Direct Unit Programming mode:

1. Look up the 4 digit code from brand list. If one brand has several codes, you should try the first code listed. If it doesn't work, try the second and so on until the remotes operates your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289, etc.
2. Press SELECT key. Enter the 4 digit code in turn. Ex: "0288", press the "0" first and press "2", "8", "8" in the proper code. Press once, the direction light will flash, finish the code entry, the remote confirms the setting automatically. Numeric keypad codes operate the following functions (EX: 1 for mode, 2 for swing, 3 for dir, 4 for fan. etc.)
3. Press "one-key" and the air-conditioner should operate. If it does not work, try "0289" uses these methods until the air-conditioner operates.

### 2. Auto-search code setting:

If you do not know the brand of your air conditioner, or if your brand and is not listed in the code Table, try searching for your code as follows:

1. Aim the remote at your air conditioner and press and hold S key for five seconds. The remote is entering the auto-search mode and will send a signal to the unit continuously, the code indicator will continue to blink. When the air conditioner receives the proper code from the remote and indicates a communication link has been established you will hear a buzz – IMMEDIATELY press any key to confirm. Note: please press a key as soon as you hear the buzzer, otherwise, you could miss the correct code.
2. Aim the remote at your air conditioner again, press "one key", the air conditioner will operate and this will complete the set-up process.

## Function indication:

### 1. One-key nonstop function:

After setting codes, whether in summer or winter, when you want to use air conditioner, just aim remote at your air conditioner and press the "one key". Remote can judge the room is in summer or winter according to the current temperature. In summer, the temperature will be set at 26 Deg. C (79F). In winter, the temperature will be set at 20 Deg. C (68F) with the fan set at medium speed and vest swing in auto mode. To make adjustments to the temperature setting, you can adjust by temp by using the "+" or "-" keys. Of course, the remote also has common functions as original remote.

### 2. Clock set up:

1. Press the "CLOCK" button until the clock blinks.
2. Press the TIME "+" or "-", setting to the current time.
3. Press the "CLOCK" button again and the time setting is complete.

### 3. Timer On and Off:

No matter whether the air conditioner on or off you could set the timer on and off at the same time.

1. Press the "TMR on" button, the LCD displays the clock signal and time blinking. Press TIME "+" "-" button, adjust to the required time, and it will confirm the time of turn on after 5 seconds.
2. Press the "TMR off" button, the LCD displays the clock signal and time blinking. Press TIME "+" "-" button, adjust to the required time, and it will confirm the time of turn off after 5 seconds.

Note:

1. The time frame can be set between 00-24 hours;
2. Press the "timer on" or "timer off" two times continuously, cancels the timing..
4. Conversions between Celsius and Fahrenheit degree:

To switch between Celsius and Fahrenheit display, just press the "C/F", remote will convert the display between Fahrenheit and Celsius.

### 5. Thermometer Function:

The remote will display the current temperature setting, it will also display the room temperature to offer convenience for controlling the temperature anytime.

## Attention:

1. If the remote will not be used for an extended period of time, remove the batteries to avoid the possibility of battery chemical leakage that could damage the remote control unit. When the LCD display looks dim, please install new batteries. (New and old batteries cannot be used together). After the batteries are replaced, it is not necessary to set model code again.
2. As usual the LCD only displays the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.
3. Check carefully that there is no obstructions between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer retains the right to change the parameter and function of product.

## Technical Parameters:

**Controllable distance:** Approximately 26 Ft. or 8 meters

**Battery model:** Battery AAA (UM-4, R03)x2

**Dimension:** L145mmxW55mmxD16mm

**Weight:** Approx 70g (excl. the batteries)

*\*The final explanatory right is reserved this company.*

*Any alteration on the design and model will not be further notified.*